

- - - How to update SHOWBOX VITAMIN 5000 HD - - - ST 7111


[USB Update Method]

* Condition : Must have 1 Extended hard disk, USB cable

- (1) Uncompress the zip file, and move a new appl binary file to the extended hard disk.
- (2) Disconnect the hard disk from the PC, and connect the hard disk to the zapping box.
- (3) Select the “S/W Upgrade” menu in the Utility, and find a new appl binary.
- (4) Press “OK” button, then “System Upgrade” screen will be displayed.
- (5) Once again, press “OK” button, then appl binary is automatically updated on zapping box.

[Serial Down Load Method] by RS232

* Condition : Serial cable must be connected on the COMM 1 Port

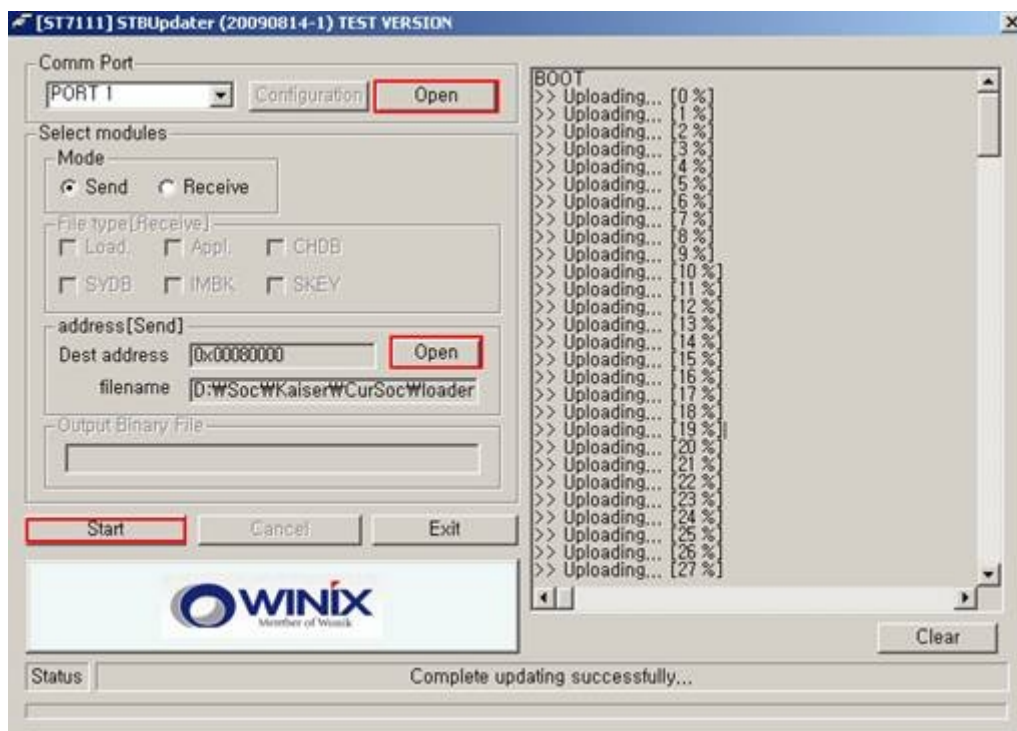

- (1) Execute the “STBUpdate.exe” program.
- (2) Press the first “Open” button, then you can see the “Open Comm Port...[Port:1] →OK!!” message.
- (3) Press the second “Open” button, and select an attached new appl binary after uncompressed.
- (4) Press the “Start” button, then a new app binary should be updated on your STB.
- (5) After waiting 5 ~ 10 minutes, all is completed.